


# OHLSON

## JE33C THREE CHANNEL TIME CLOCK

### USER INSTRUCTIONS

#### Control and Display

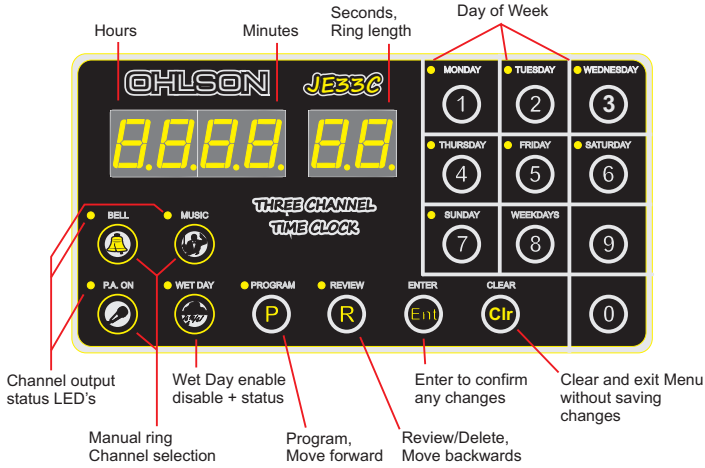

#### Changing the Current Time

From the main menu press **P** followed by **P** to edit the Current Time. The Program LED will light up and the Hours flash indicating the Hours can be changed and the seconds will display zero.



Enter the Hours then press **P** to edit the Minutes, followed by **P** to edit the Day of Week. Pressing **P** will cycle forwards between editing Hours to Minutes then to Day of the Week. Pressing **R** will cycle backwards between editing Day of the Week to Minutes then to Hours. Press **Ent** to save the new Time. Press **Clr** to exit without saving.

#### Manual Ring

From the main menu press one of the Channel keys (Bell, Music, PA. ON) do a Manual ring. The Program LED will light up, the display show "RING", Seconds will flash indicating the Ring length can be changed and the corresponding Channel LED will flash.



Enter the length of the ring you want. Bell ring length is 1 to 30 seconds, Music is 1 to 30 minutes and P.A. ON is 0=off and 1=on. Press **Ent** to activate the Manual Ring. Press **Clr** to exit WITHOUT activating a Manual Ring.

#### Wet Day Enable/Disable

From the main menu press **Wet Day** to Toggle Wet Day mode. The Program LED will light up and Wet Day LED will Flash.



Press **Ent** to Toggle Wet Day Mode. Press **Clr** to exit WITHOUT changing the Wet Day Mode.

#### Holiday Mode

From the main menu press **P** followed by **9** to Toggle Holiday mode. In Holiday mode the JE33C will not activate on any stored times. Manual rings are still possible. The Program LED will light up and the display will Flash "Holiday".



Press **Ent** to Toggle Holiday Mode. Press **Clr** to exit WITHOUT changing the Holiday Mode.

#### New Ring Time

From the main menu press **P** followed by one of the Channel keys (Bell, Music, PA. ON).

The Program LED, selected Channel LED will light up and the Hours flash indicating the Hours can be changed and the seconds will display the default ring length.



Press **Wet Day** to toggle the Wet Day Mode for "BELL" and "MUSIC" Channels.

Enter the Hours then press **P** to enter minutes.



Enter the Minutes then press **P** to enter the ring length.




Enter the length of the ring you want. Bell ring length is 1 to 30 seconds, Music is 1 to 30 minutes and P.A. ON is 0=off and 1=on.

Press **P** to enter the Days of the Week.

Use keys 1-7 to Toggle the Days of the Weeks On and Off.

Press **8** to turn all Week Days on ie Monday - Friday.

Press **0** to turn all the Days of the Week off.

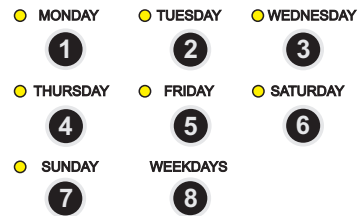

Pressing **P** will cycle forwards between editing Hours, Minutes, Ring length then to Days of the Week.

Pressing **R** will cycle backwards between editing Days of the Week, Ring length, Minutes then to Hours.

Press **Ent** to save the new Ring Time. Press **Clr** to exit WITHOUT saving the new Ring Time.

#### Entering Security Code

The JE33C can have a Security Code enabled to stop unauthorised tapping. To enable see "Changing Security Code" on the next page.

If the Security Code is Enabled, whenever you try to change any setting on the JE33C the following menu will pop up first asking for the Security Code to be entered.



Pressing **R** will move the cursor position backwards, in case you entered the wrong code.

Enter the four digit code then press the **Ent** key to move onto your previously selected menu.

Press **Clr** to quit back to the Main Menu.

## Change Security Code

From the main menu press **P** followed by **0** to change the Security code.

Setting the JE33C to have a code of "0000" will switch off the Security Code feature.



Enter the new 4 digit Security Code followed by **Ent**






Re-enter the 4 digit code to confirm then press **Ent** to save.

Pressing **R** will move the cursor position backwards, incase you entered the wrong code.

Press **Clr** to quit back to the Main Menu WITHOUT saving the new Security Code.

## View / Delete Stored Times

From the main menu press **R** followed by one of the Channel keys.   

The Review LED and the selected Channel LED will light up. The display will show the first stored time for the selected channel (Hours, Minutes and Ring Length).



Press  to toggle the Wet Day Mode for "BELL" and "MUSIC" Channels.

Press **P** to see the next stored Ring Time. Press **R** to see the previous stored Ring Time.

A number of other information screens can be displayed while Viewing/Deleteing stored times:-



To Delete the time currently displayed press the **Ent** key.




Press **Clr** to exit at any time.

## Delete Channel

From the main menu press **R** followed by **R** to select a Channel for Deletion.

The Review LED will light up and the Bells LED will flash to indicate its selected for Deletion.



Press any of the    keys to select the Channel you would like to be Deleted.

Press  to toggle the Wet Day Mode for "BELL" and "MUSIC" Channels

Press **R** to Select all Channels for Deletion.

Press **Ent** to Delete all stored times in the Selected Channel.

Press **Clr** to exit WITHOUT Deleting anything.

## Serial Number

From the main menu press **9** to show the JE33C six digit serial number.



Press **Clr** to quit back to the Main Menu.

## Maintenance and Warranty

### CAUTION

The full AC line voltage is present at several points inside the chassis. To reduce the risk of electric shock, do not perform any servicing unless you are qualified to do so. Refer all servicing to qualified service personnel.

### MAINTENANCE

This OHLSON product is all solid state, solidly constructed and uses the finest components. As such it will provide years of trouble free use with normal care. All parts are conservatively rated for their application. There are no User Serviceable parts inside. Refer all servicing to Qualified Service Personnel.

This product is warranted by OHLSON to the original purchaser against defects in material and workmanship for a period of two years from date of purchase.

We require that you retain a copy of your dated sales receipt for proof of warranty status.

OHLSON will, without charge, repair or replace, at its option, defective product or component parts upon prepaid delivery to the factory.

EXCLUSIONS: This warranty does not apply in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs. This warranty is void if the serial number is altered, defaced, or removed.

OHLSON reserves the right to make changes in design or make additions to or improvements upon this product without any obligation to install the same on products previously manufactured.

## Contact

### OHLSON Amplifiers

Unit 12/1866 Dandenong Road  
Clayton Victoria 3168  
AUSTRALIA  
T +61 410 547 347  
F +613 85 120 184  
W [www.ohlson.com.au](http://www.ohlson.com.au)